




EXTRUTECH PLASTICS, INC.

Manufactured in the USA

www.EPIplastics.com | 888-818-0118

Slat Wall Kit #SW1200-KIT


* Fasteners by others

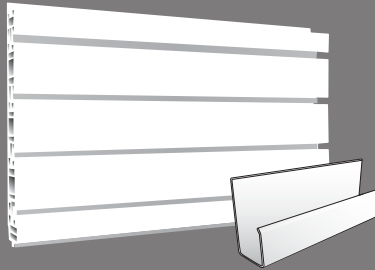


WALL SURFACE



WALL SURFACE

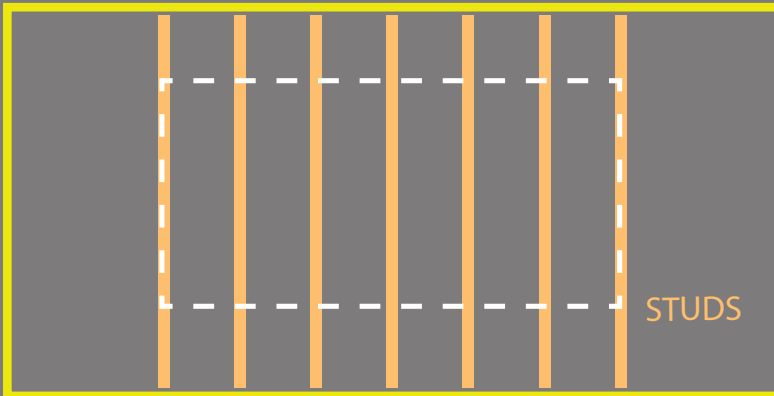

STUDS

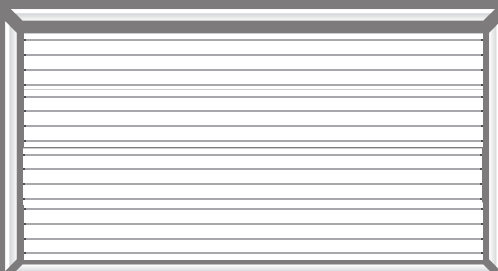

FASTENER OPTIONS

(Provided by others)

FOR MASONRY:

TAPCON screws 3/16" x 1-1/4" SMALL HEAD with 1/4" stainless washers

FOR WOOD :

1-1/4" NO. 8 Truss Head Sheet Metal Screws

FOR METAL:

SMALL HEAD Truss Sheet Metal or Tek Screws

Fasten SNUG - NOT Tight


1. DETERMINE LOCATION ON WALL

2. CHECK FOR & MARK STUDS (AS NEEDED)

3. LAY OUT THE HEIGHT & WIDTH OF THE PIECES


4. CUT TO SIZE (IF YOUR SPACE REQUIRES IT)

- PANEL ENDS NEED TO BE LONG ENOUGH TO BE SECURED TO STUDS OR SUBSTRATE
- CUT TRIMS 1/4" LONGER THAN THE TOTAL ANGLE WIDTH AND HEIGHT

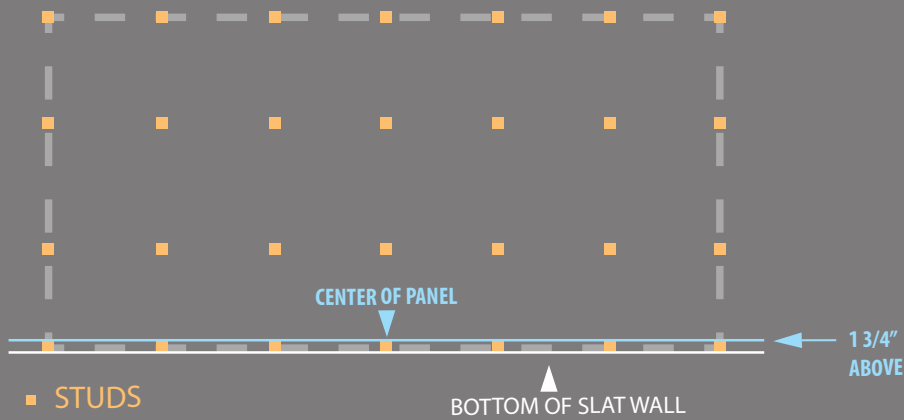


5. SET BOTTOM HEIGHT

- MEASURE 1 3/4" ABOVE BOTTOM WALL MARK
- DRAW LINE
- CHECK LINE WITH LEVEL

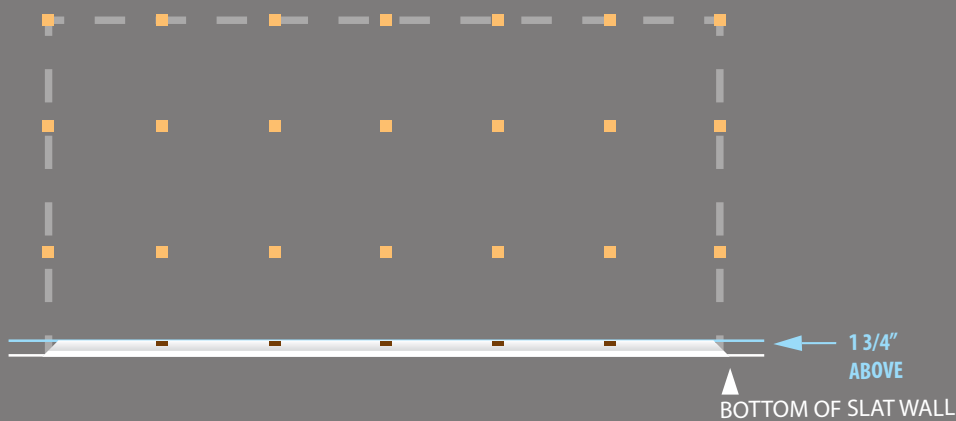


6. INSTALL BOTTOM TRIM

- POSITION THE TOP EDGE OF THE BOTTOM TRIM ALONG THE LEVEL LINE
- ATTACH ONE FASTENER AT SUBSTRATE
- CHECK WITH LEVEL
- FINISH SECURING TRIM WITH FASTENERS AT 16" INTERVALS
Snug **NOT** tight, to allow for material movement with temperature changes

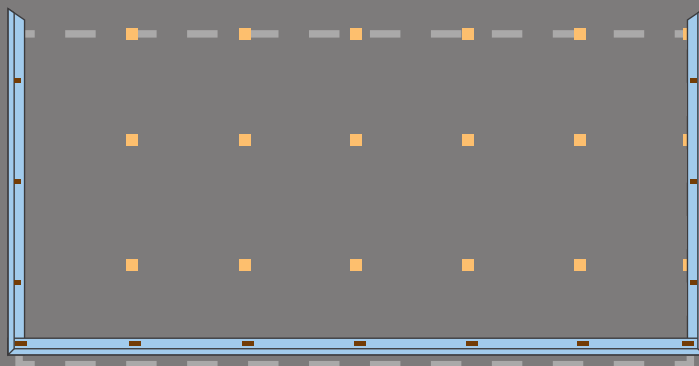



7. INSTALL BOTTOM & SIDE TRIMS

- POSITION THE LEFT SIDE TRIM INSIDE
- CHECK THAT IT IS LEVEL VERTICALLY
- SECURE THE TRIM AT THE STUDS
- REPEAT FOR RIGHT SIDE TRIM

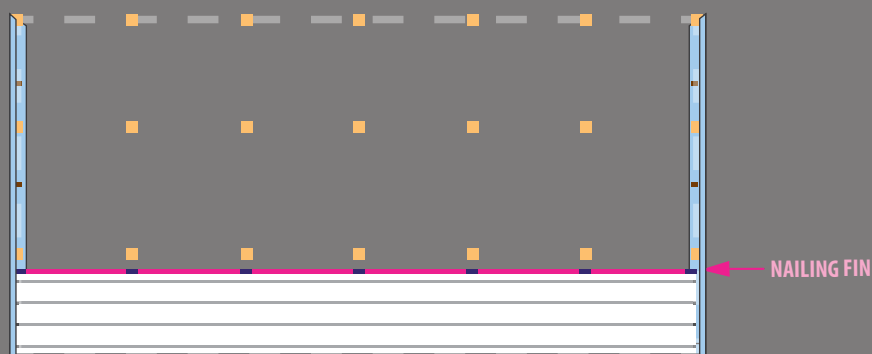


8. INSTALL FIRST PANEL

- SLIDE THE PANEL DOWN INTO THE BOTTOM TRIM (BEND PANEL SLIGHTLY IF NEEDED)
- ATTACH FASTENERS AT SUBSTRATE EVERY 16" (INCLUDING THROUGH THE SIDE TRIMS)

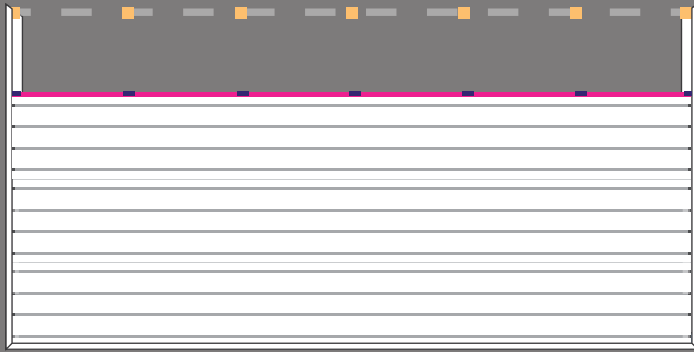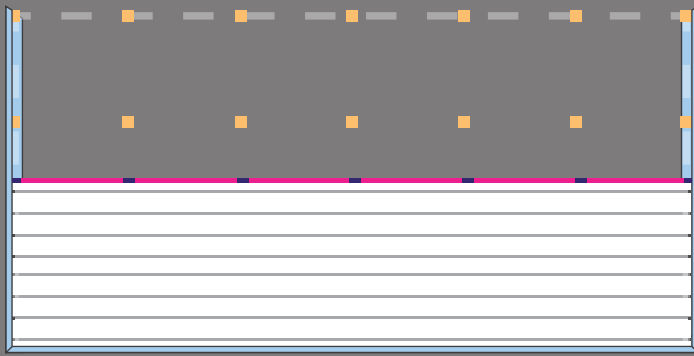



9. INSTALL NEXT PANELS

- SLIDE 2ND PANEL DOWN INSIDE THE SIDE TRIMS AND OVER THE NAILING FIN OF THE PREVIOUS PANEL
- CHECK THAT IT IS LEVEL
- ATTACH FASTENERS AT SUBSTRATE EVERY 16" (INCLUDING THROUGH THE SIDE TRIMS)
- REPEAT FOR 3RD PANEL


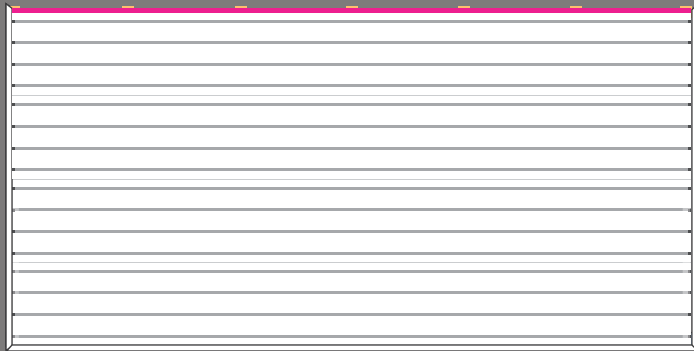


10. INSTALL TOP TRIM

- SLIDE THE FINAL PANEL DOWN, DO **NOT** ATTACH NAIL FIN FASTENERS YET
- SLIDE THE TOP TRIM DOWN BEHIND THE NAIL FIN OF THE LAST PANEL
- BEND TOP OF TRIM BACK AND SECURE THE TRIM AND PANEL WITH THE SAME SCREW
- INSTALL REMAINING SCREWS ACROSS THE FIN
- PULL TOP TRIM OVER THE TOP OF THE FINAL PANEL

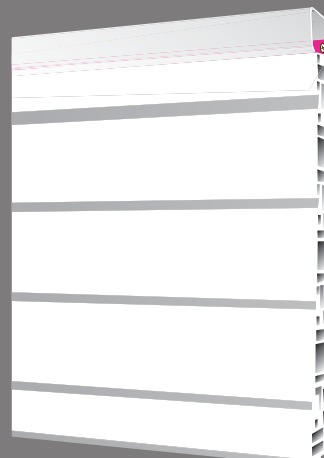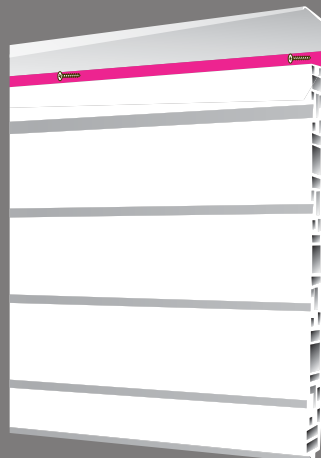

Installing Multiple Slat Wall Kits

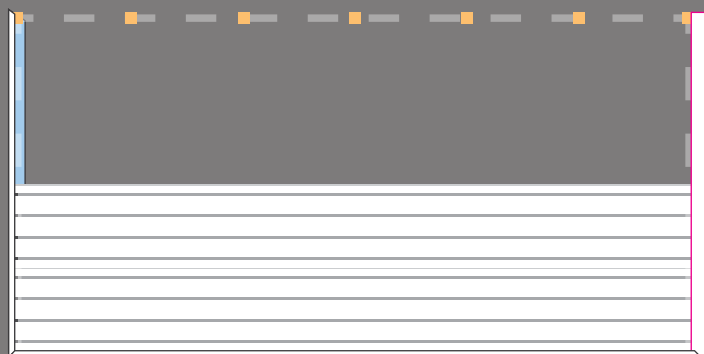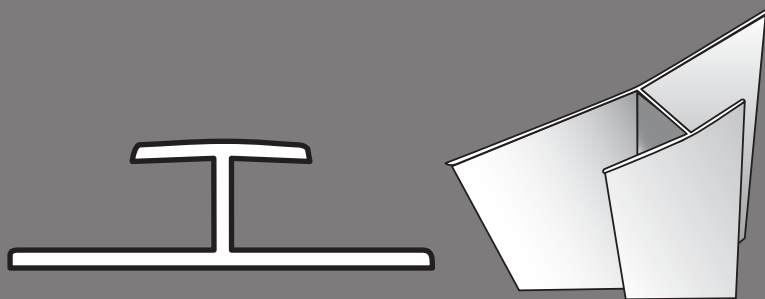

REPLACE THE SIDE TRIM ON STEP 7 WITH AN H-BAR

THE H-BAR SETS OVER THE
PANELS AND UNDER THE TOP
AND BOTTOM TRIMS

THEN ADD ANOTHER SET OF
PANELS

THEN FINISH WITH THE TOP TRIMS

